

A. Package content

- Controller x 1, CD x 1, Warranty card x 1, Installation Guide x 1
- Accessory kit x 1 (Screw x 4, Spacers x 4)

B. Installation

- Physical Dimension: 138 x 114 x 27 mm
- Recommended: Cable with shielded, Linear DC power

■ Specifications


- Voltage Range: 9~24 VDC
- Controller Power Consumption: 180mA
- Power Recommend: 500mA
- Max Distance for RS485: 1000M

■ Notice


- Do not connect other cables to the power unit except power contacts.
- Do not apply any unverified power supply to the unit.
(Might cause hardware damage and system unstable)

■ Optional

- Special Case

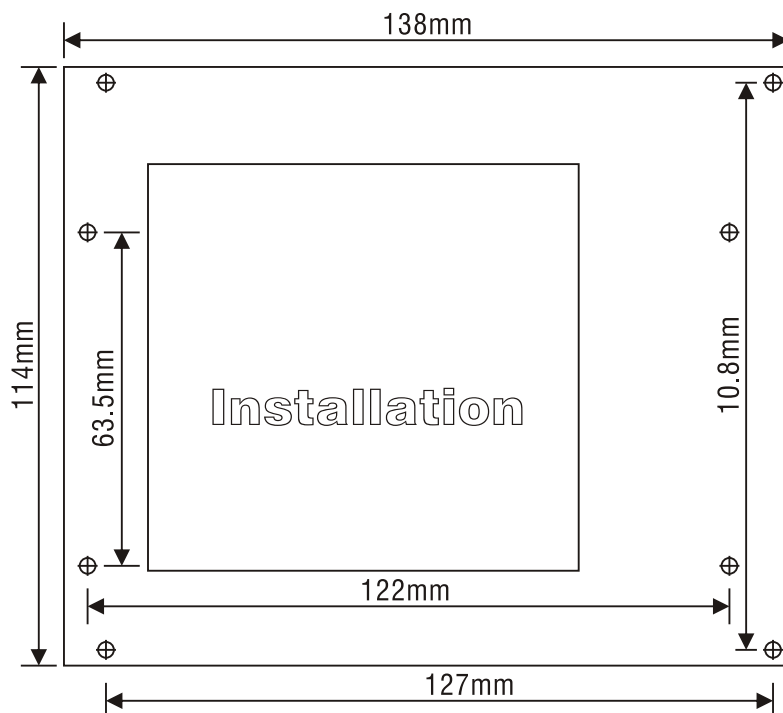


C . Contact Guide

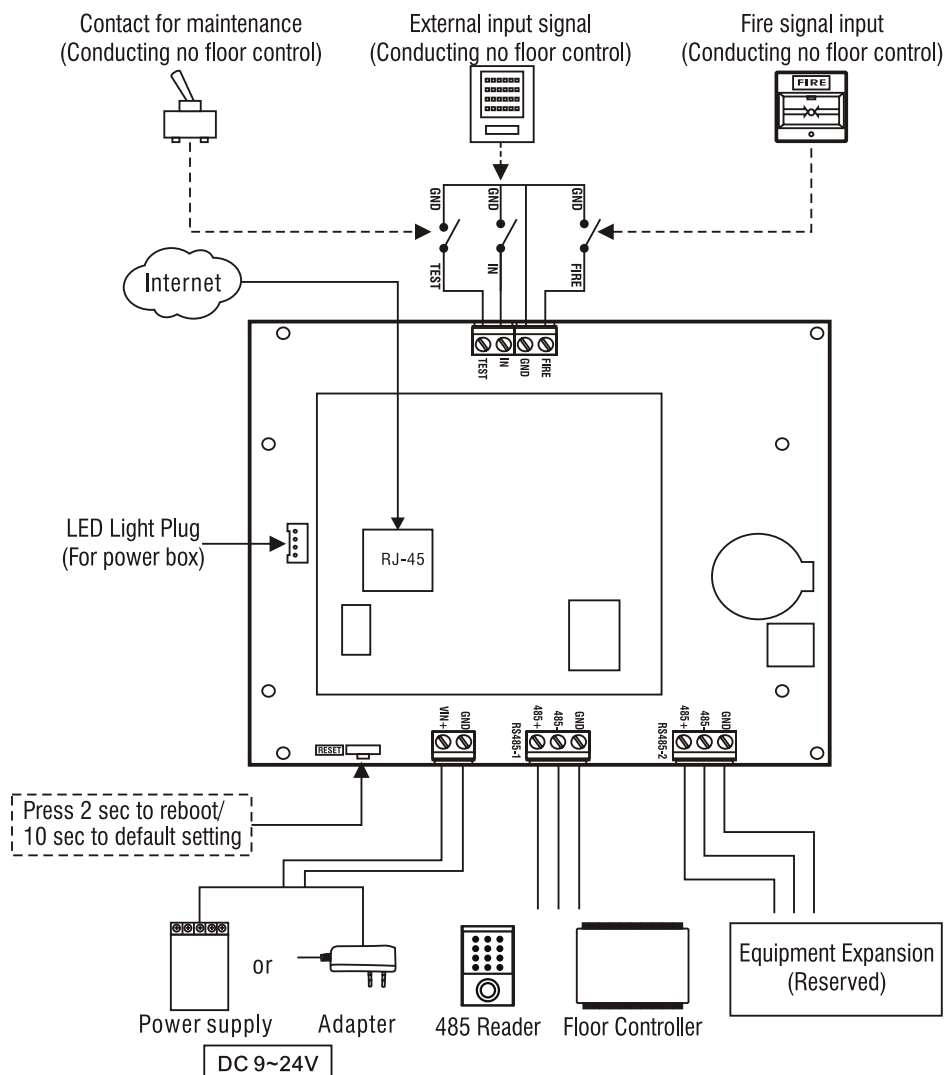


D. Structure


WG Reader Application Structure

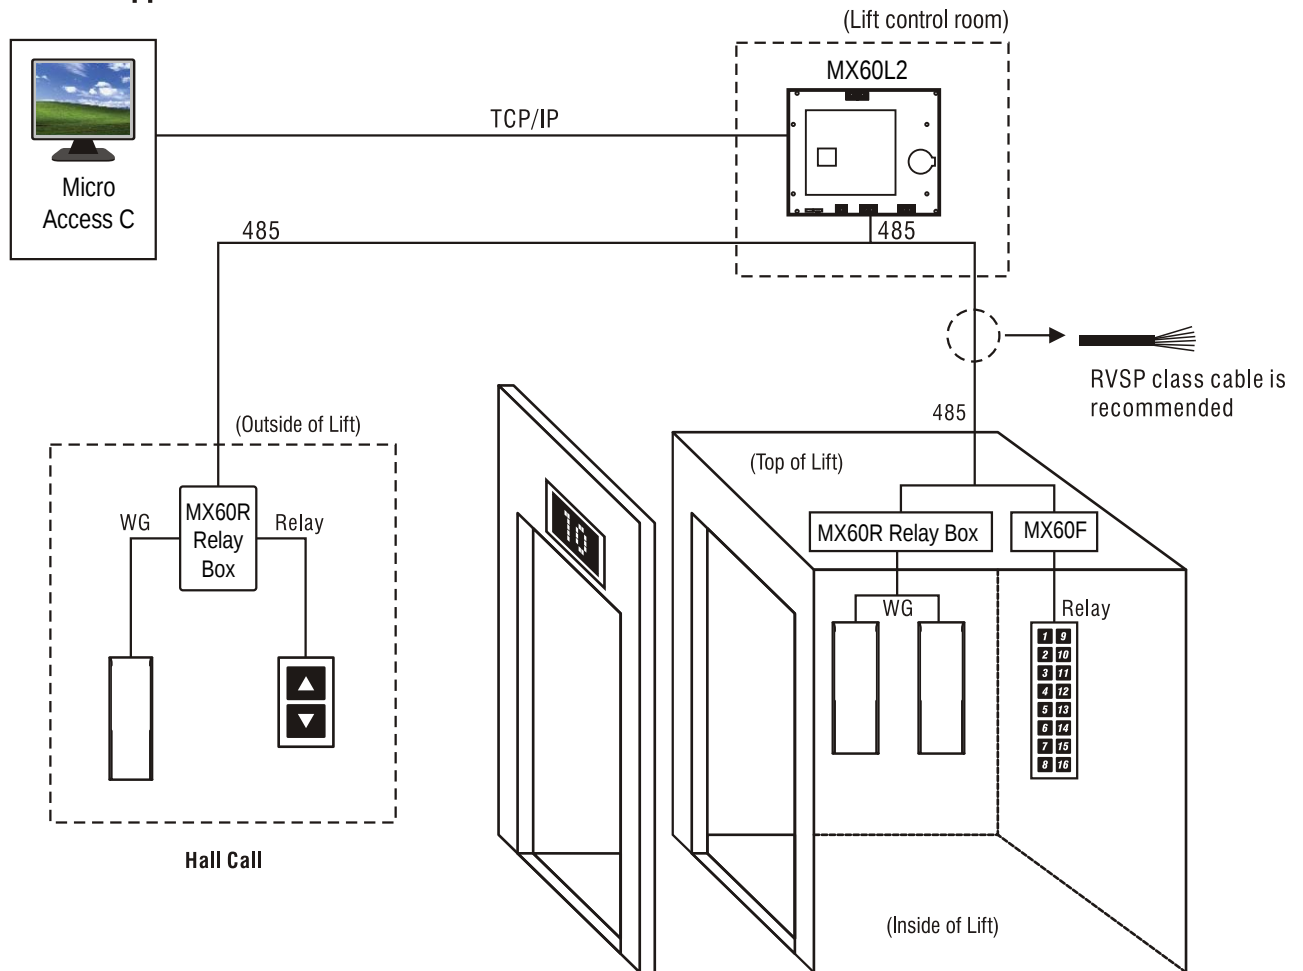


485 Reader Application Structure

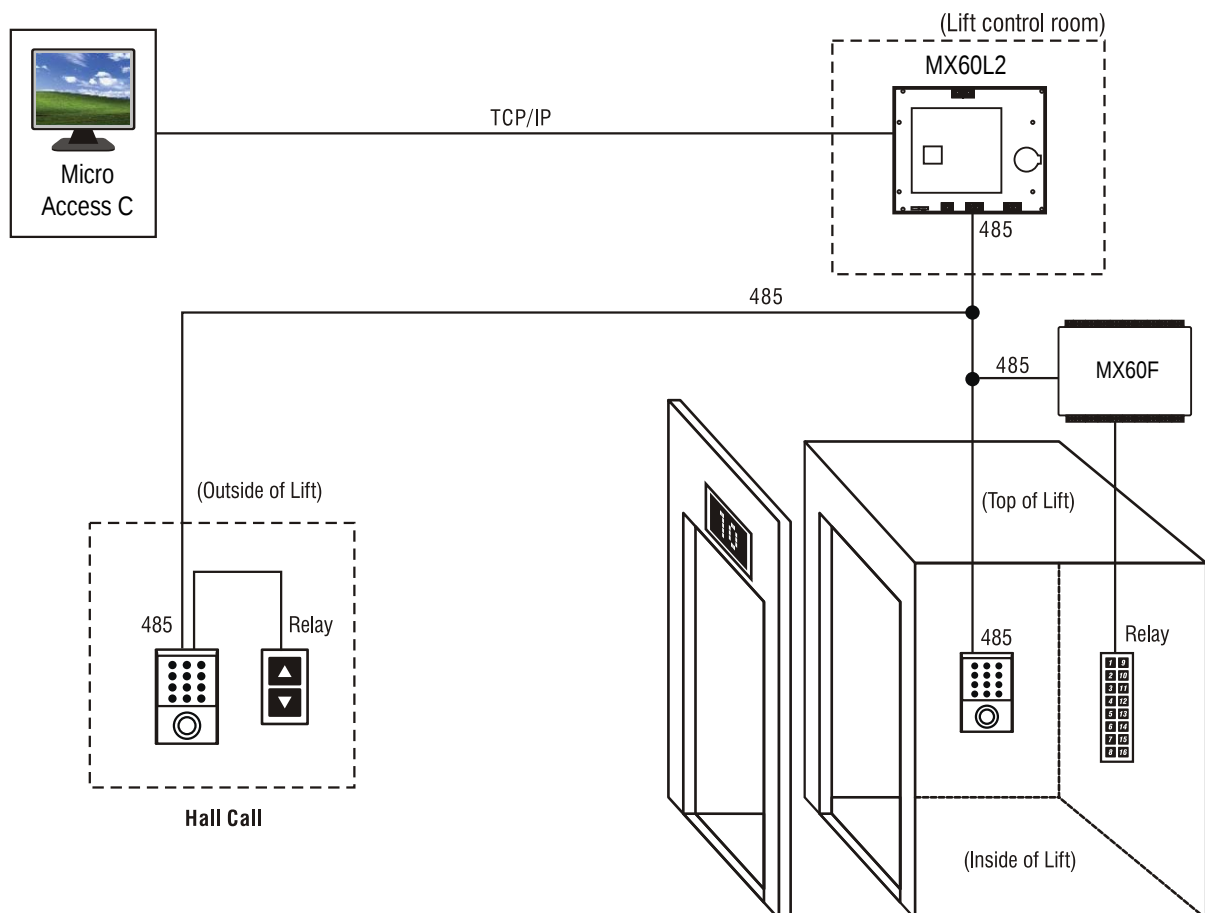


E. System connection (WG Reader Application Architecture)

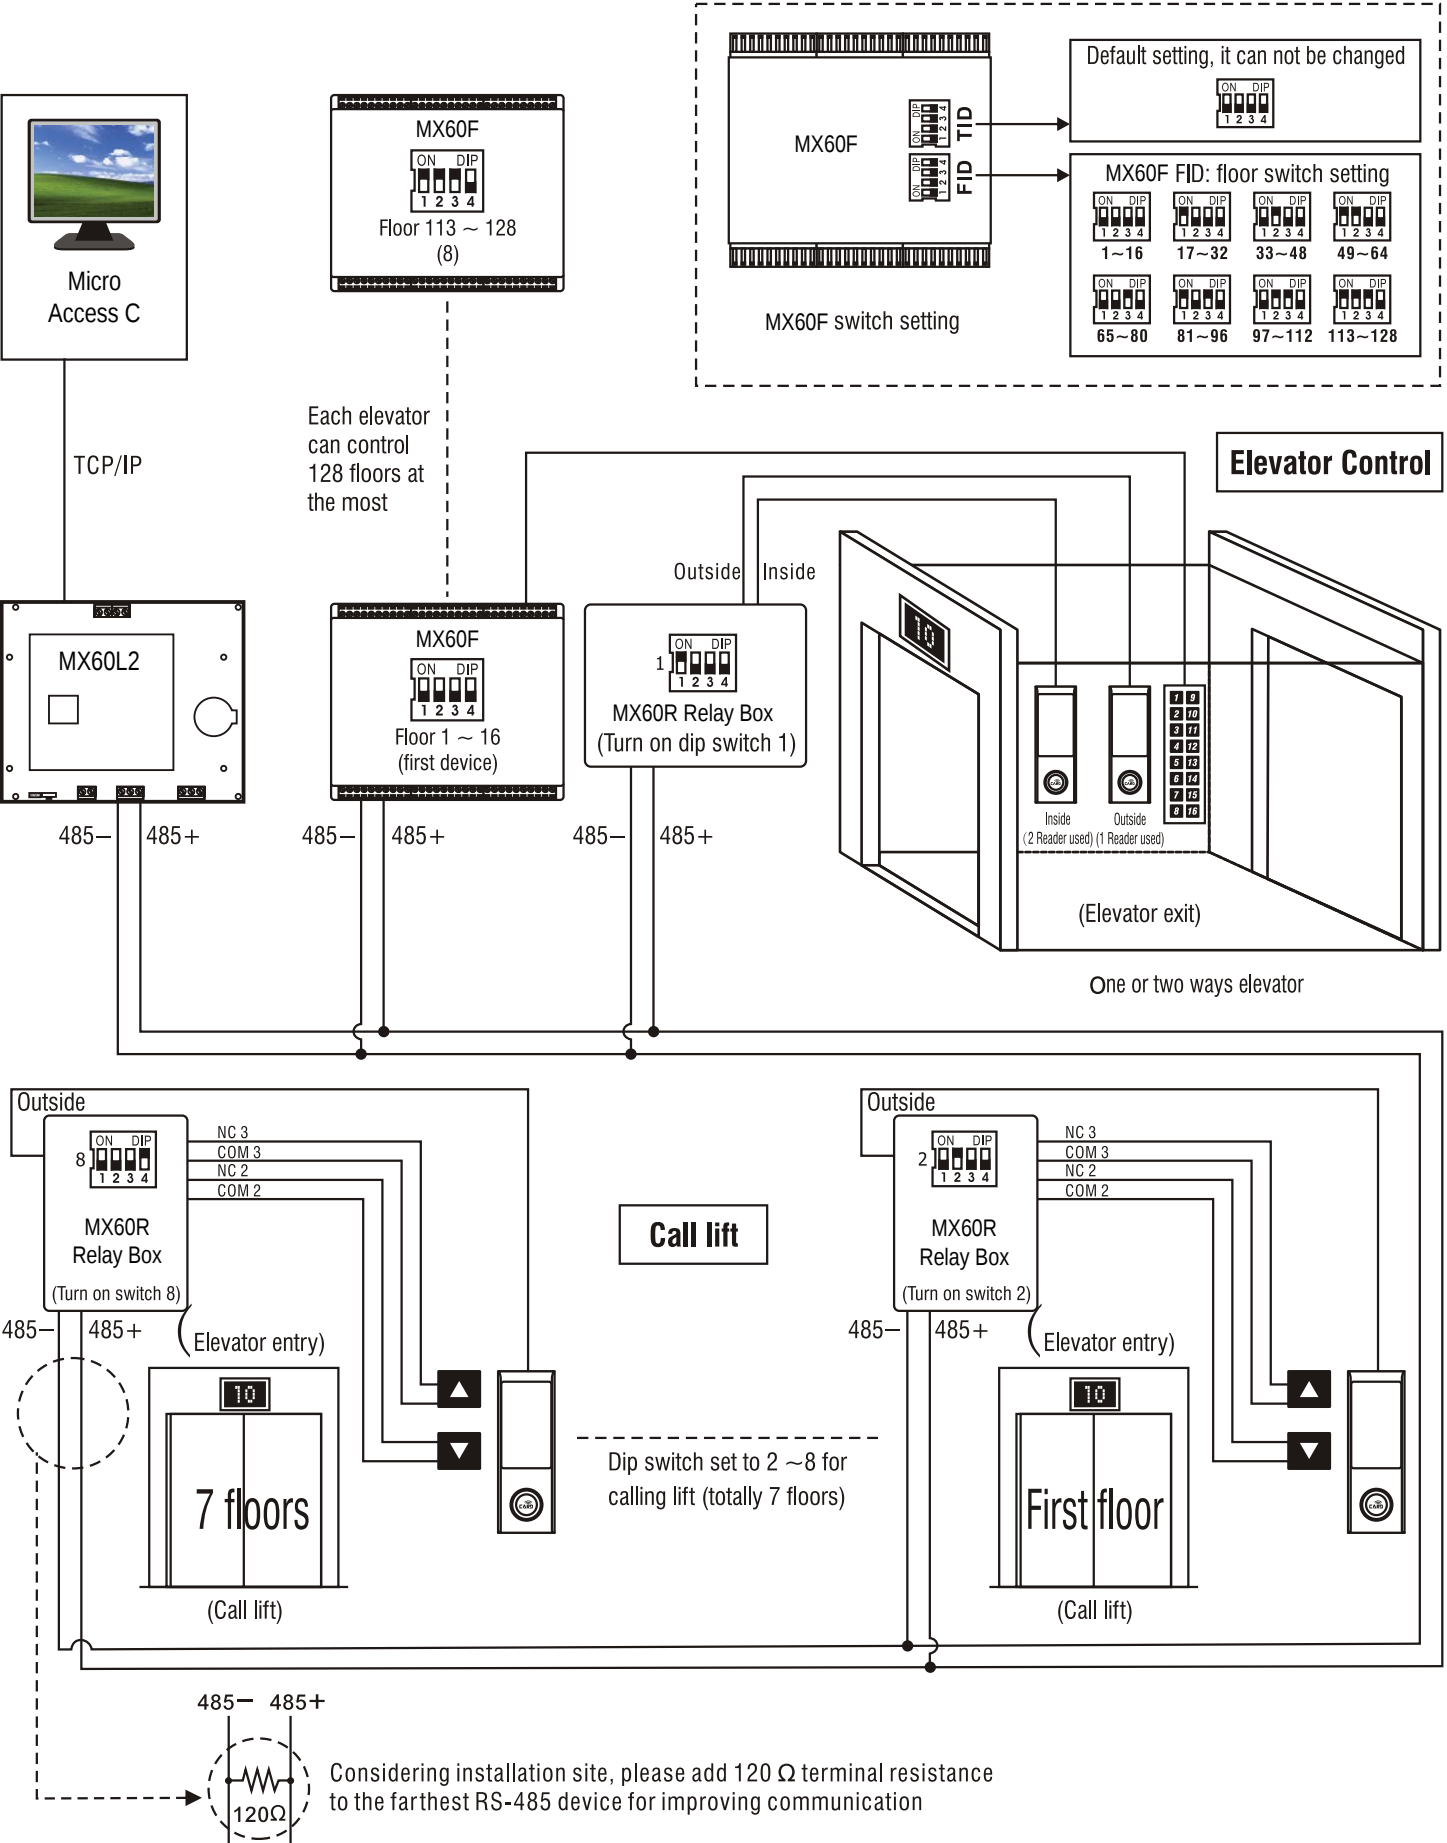

F. MX60R Relay Box Switch Setting

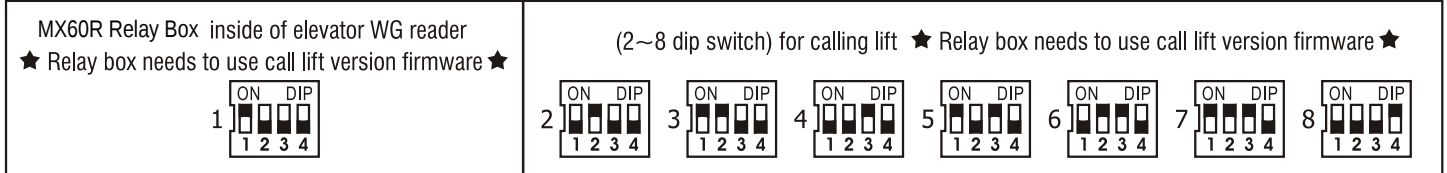

G. System connection (485 Reader Application Structure)

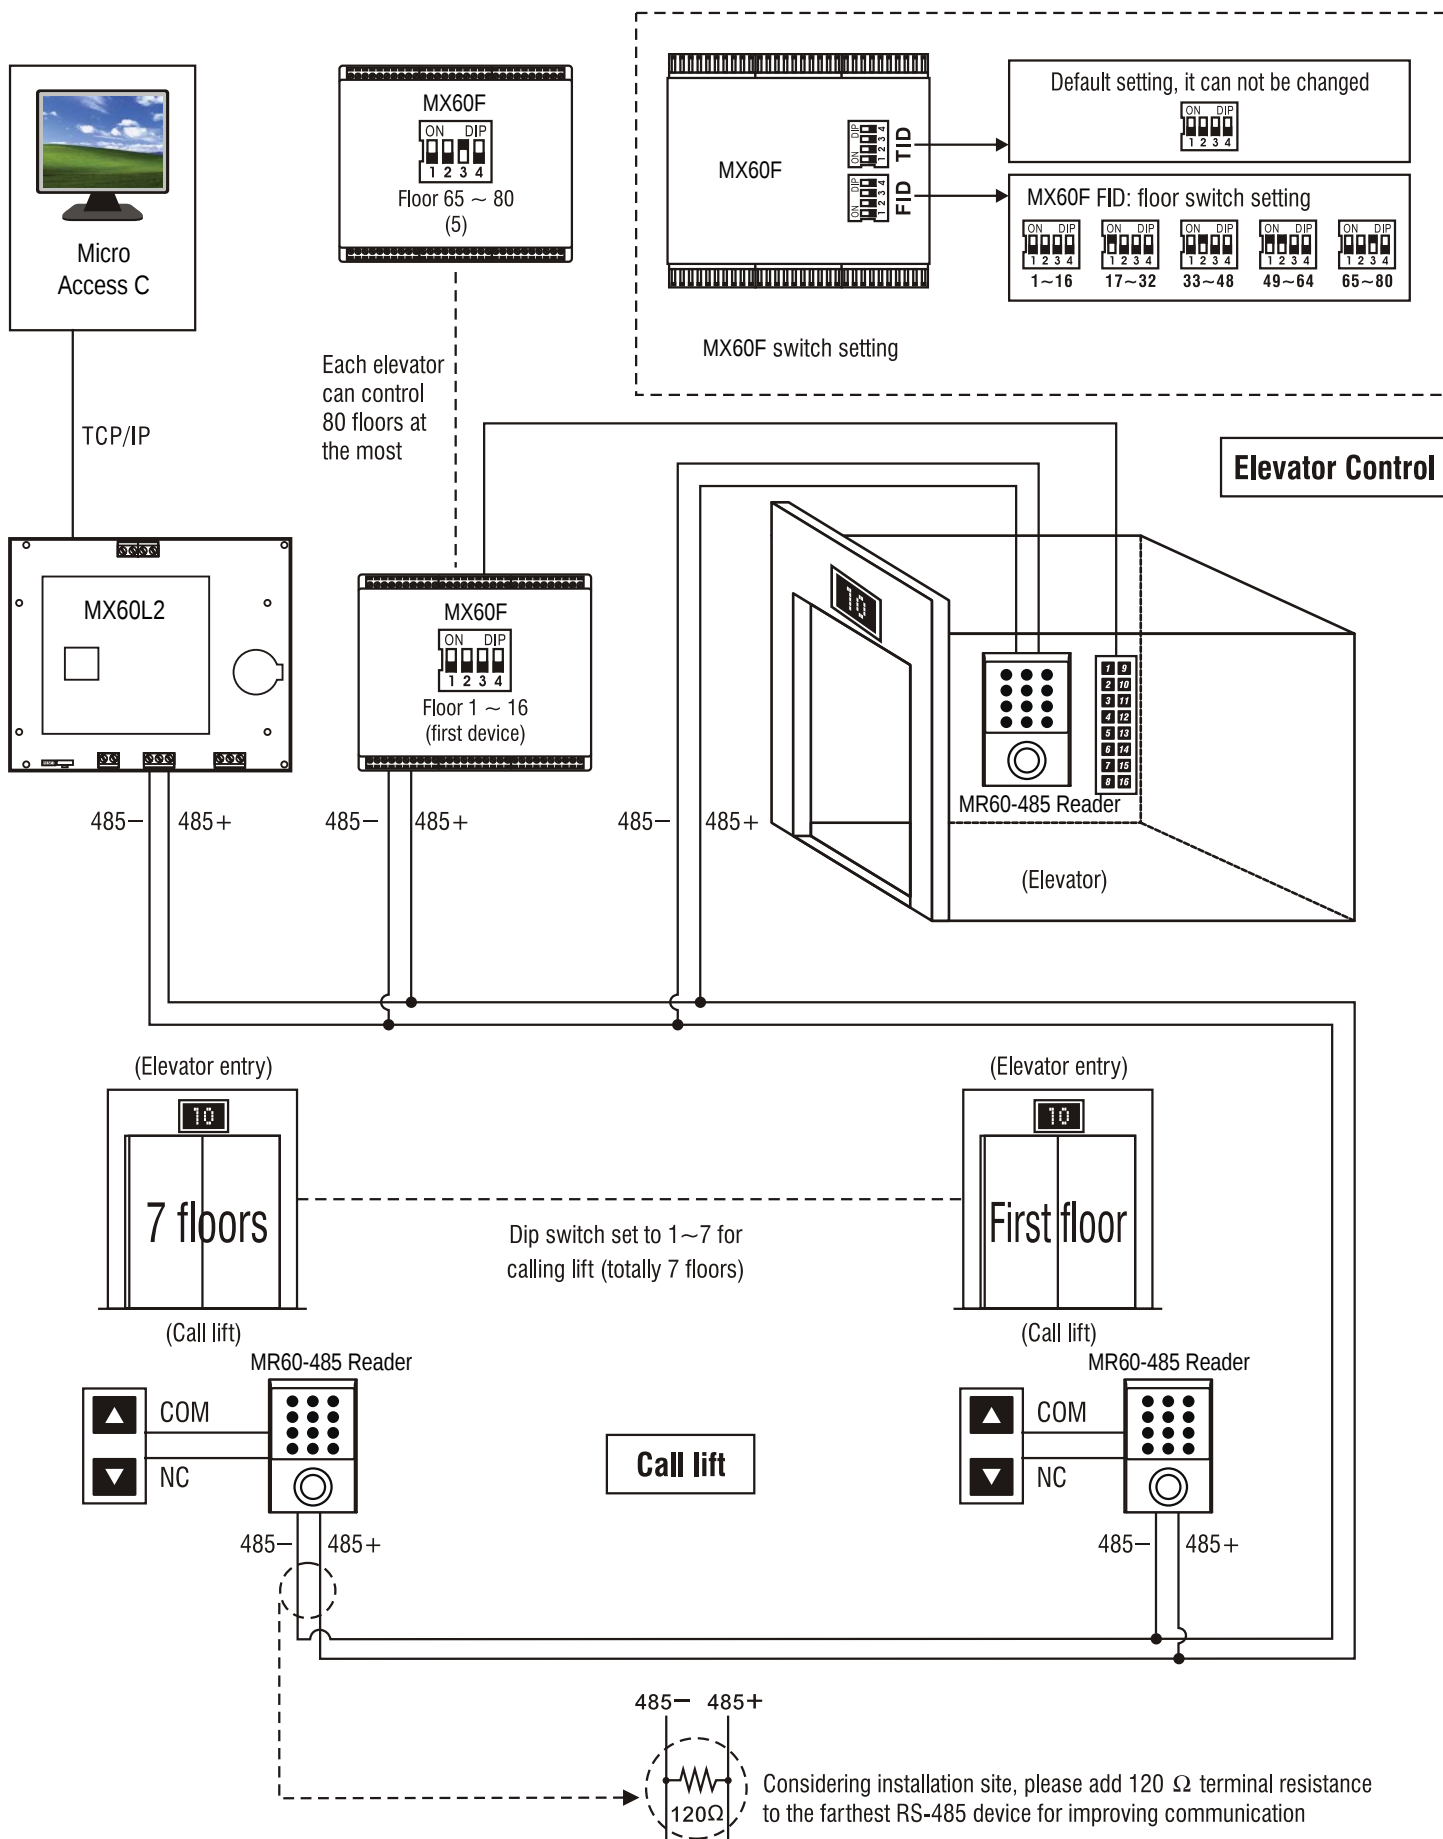

H. MR60-485 Reader TID Setup

Manually input TID code from MR60-485 Reader : * * # # (0~7)

When TID has setup, it is necessary to access MX60L2 web server to save and activate TID information on the system by pressing "Search BF-50/BF-333" button.

[illegible]